




FEED SAFETY PIN INTO THE FRONT SIDE OF THE CASING

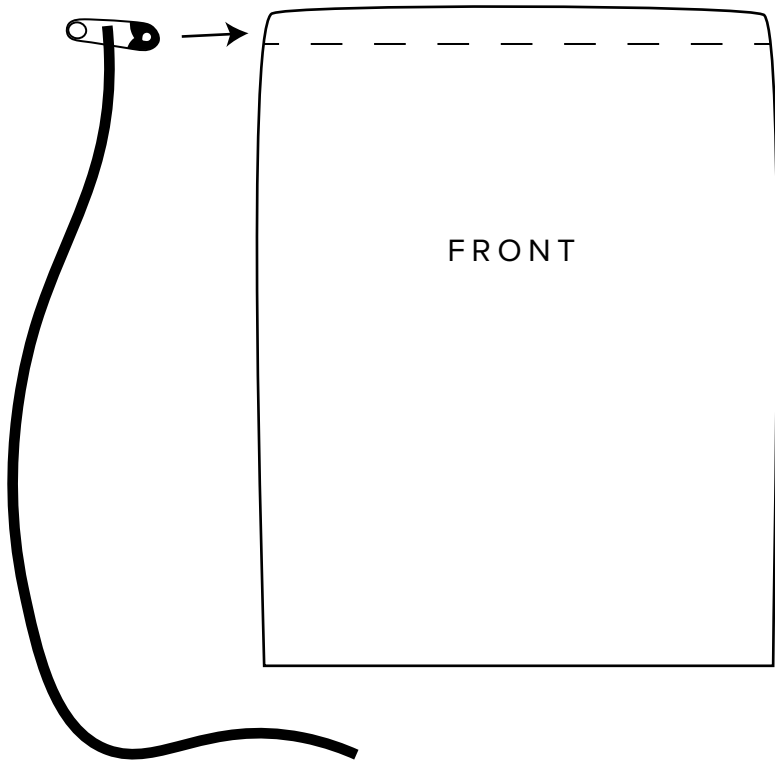


CONTINUE UNTIL THE SAFETY PIN POKES OUT THE OTHER END OF THE FRONT SIDE OF THE CASING

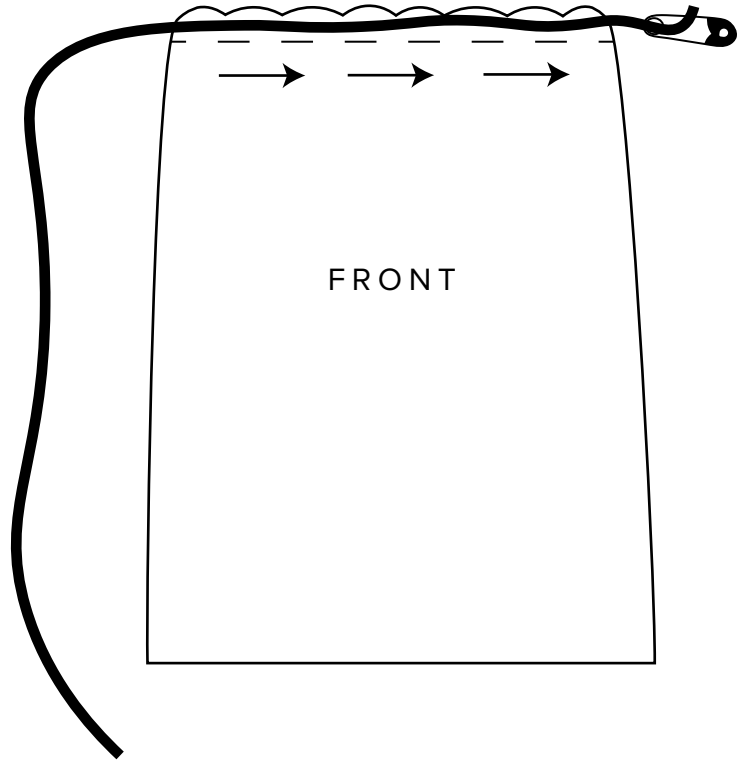


NOW FLIP THE BAG OVER. IT SHOULD LOOK LIKE THIS:

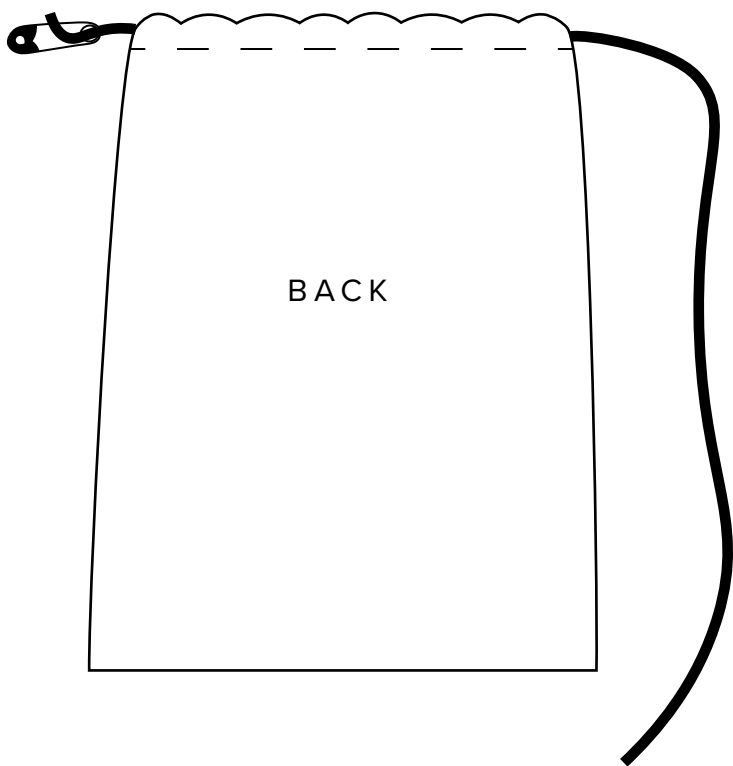

NOW FEED THE SAFETY PIN INTO THE BACK SIDE OF THE CASING

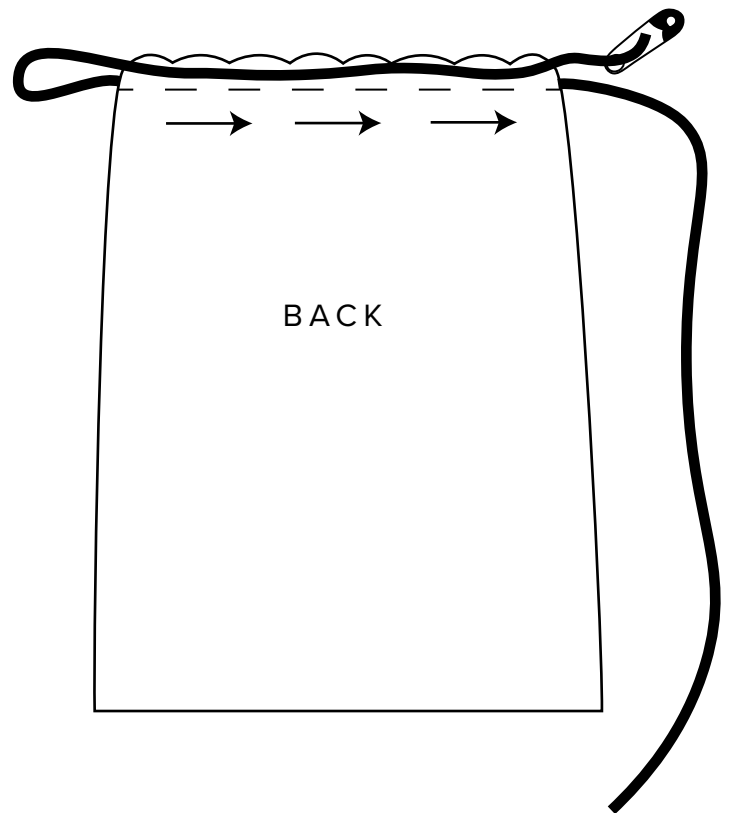

PULL IT THROUGH SO THERE'S ENOUGH SLACK TO REACH THE BOTTOM CORNER

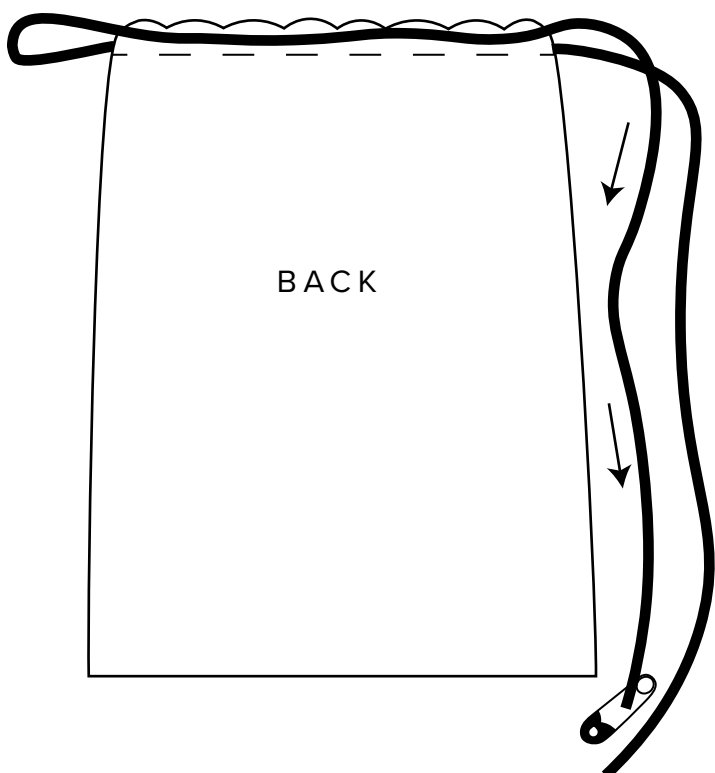

REPEAT FOR THE OPPOSITE SIDE. IT SHOULD LOOK LIKE THIS WHEN DONE:

